

Howe Library

31254004023582

Blu-ray Disc™ Player

User Manual

EVP-203

LOT
DVD PLAYER

Disclaimer

1. Congratulations on your purchase of the multi-media Player. Before using your player, it is recommended that you familiarize yourself with the features, functions, and operating procedures described in this manual. Due to slight modifications in production, the instructions, features, and descriptions found in this manual might be slightly different from your product. Design and specification subject to change without notice.

2. We only sell brand "NEW" condition products on Amazon, after-sale service will be only offered for customer who orders the brand new products. "Used" products are not under support.

Notice

Our product is a Blu-ray Disc™ Player, we have limitation for the Blu-ray regions before you purchase the discs, please read below regions information first so that your discs can be played.

Blu-ray Discs: Single Region B/C doesn't support, please buy Region A/1 Blu ray discs, Max 1080P, **only HDMI jack support output Blu ray videos, make sure you connected your TV with HDMI cable**, AV jack just for 480P standard videos.

Non-Blu-Ray Discs: Region free

Contents

Safety and Maintenance.....	1
Notice.....	3
Instruction.....	4
Package Contents.....	5
Unit Diagram.....	5
Remote Control.....	6
6.1 Remote Control Definition.....	6
6.2 Useful tips for the buttons on the remote control	8
6.3 Installation of Battery.....	9
Connections.....	9
7.1 Connect Power adapter.....	9
7.2 Connect USB Device.....	10
7.3 Connect TV Via AV Out.....	10
7.4 Connect TV and Projector Via HDMI Cable.....	10
Basic Player Operation.....	11
8.1 Before you begin	12
8.2 Open the disc door to play discs	13
8.3 Play Video	13
8.4 Play a Blu-ray video disc	15
8.5 Play Music.....	16
8.6 Play a photo slideshow.....	17
Play files from USB Thumb Drived.....	18
10. General Settings.....	19
10.1 Basic operation for the menu.....	19
10.2 General Player Settings.....	19
10.3 Player Settings.....	21
10.4 Audio Setting	22
11. Support formats.....	22
12. Main unit specifications.....	23
13. Warranty Exclusions.....	23
14. Troubleshooting.....	24
15. More Q & A.....	26

1. Safety and Maintenance

Here are some basic safety precautions that you should carefully follow when you use your new multi-media player. Read all instructions carefully! We are not responsible for damage or injuries caused by improper use of the appliance.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The appliance shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the appliance.

Security Instructions

Read all of the instructions before using this multi-media player and keep this manual in a safe place for future reference.

- 1) READ ALL INSTRUCTIONS.
- 2) Remove any packaging material before using this appliance.
- 3) Moisture - Do not expose this apparatus water or moisture. To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the discs player. If liquid enters the unit, unplug the device immediately. Be sure to install the player in an area where access to the AC power cord is available so that the unit may be unplugged from the wall socket immediately in the event of trouble or if the liquid is spilled onto the unit.
- 4) NOTE: If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player and the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.
- 5) Heat - The Discs player should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that

duce heat.

Proper ventilation - Do not install this player in a confined space, such as a bookshelf or similar unit unless proper ventilation is provided. Slots and openings in the Discs player casing are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surfaces as ventilation will be inhibited, and overheating will occur.

Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.

Cleaning - Unplug this product from the wall outlet before cleaning. If dusting or cleaning is required, be sure to clean the outer portion of the casing only. Do not attempt to clean the inside or to disassemble the casing. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning and be sure to allow the unit to dry completely before plugging the unit to a power source.

To protect against electric shock do not immerse cord, plugs, or appliance in water or any other liquid.

1) Close supervision is necessary when your appliance is being used by or near children.

2) Keep the appliance and its cord out of reach of children aged less than 8 years.

3) If the supplied power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

4) Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.

5) Any use of this product which is not recommended by the manufacturer may cause injury to persons or damage to the appliance.

6) Place appliance on a flat surface or table. Do not hang its power cord over the edge of the table or counter. Ensure that the power cord does not touch the hot surface of the appliance.

16) If the unit requires servicing, refer servicing to qualified service personnel. If the unit is still under warranty, contact our service center. See the terms and conditions specified under the warranty included with this product.

17) Do not use the appliance for other than intended use.

18) Do not use outdoors.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

2. Notice

2.1 Trademark Notice

DVD Logo is a trademark of DVD Format / Logo Licensing Corporation. The Blu-ray Disc™, Blu-ray™, BONUSVIEW™ word marks and logos are trademarks of the Blu-ray Disc Association.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+Digital Out is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

Java and all other Java trademarks and logo are registered trademarks of Oracle and/or its affiliates.

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Cinavia Notice

This product uses Cinavia™ technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

playback or copying is interrupted and one of the messages shown below is displayed, the content is an unauthorized copy protected by Cinavia technology.

Message	Cinavia Message Code
Message(s) 1]	1
Message(s) 2]	2
Message(s) 3]	3
Message(s) 4]	4

For more information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

Legal Message

Copyright 2004-2013 Verance Corporation. Cinavia™ is a Verance Corporation trademark. Protected by U.S. Patent 7,369,677 and worldwide patents issued and pending under license from Verance Corporation. All right reserved.

Rovi Product notice:

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering and disassembly are prohibited.

CAUTION: This product utilizes a laser.
Do not open cover and do not repair yourself. Refer servicing to qualified personnel.

1. Instruction

Congratulations on your purchase of the multi-media player. The product is a

great way to enjoy your discs without the clutter of a full-size player.

Its compact design provides easy access to all your favorite media, and the fast search backward/forwards will guarantee that you never miss a minute.

Watch from a distance via use the remote control, or use the zoom-in feature to get a closer look. This is a great way to ensure quality entertainment within minutes.


Before using your player, it is recommended that you familiarize yourself with the features, functions, and operating procedures described in this manual. Due to slight modifications in production, the instructions, features, and descriptions found in this manual might be slightly different from your product. Design and specification subject to change without notice.

4. Package Contents


Please verify your package for the following items. Besides that, the package contents may differ due to the products upgraded. All product contents are subjected to the actual product receives.

Blu-ray Disc™ Player	1pcs
Remote Control (without battery)	1pcs
HDMI Cable	1pcs
User Manual	1pcs
Power adapter	1pcs
AV Cable	1pcs


5. Unit Diagram

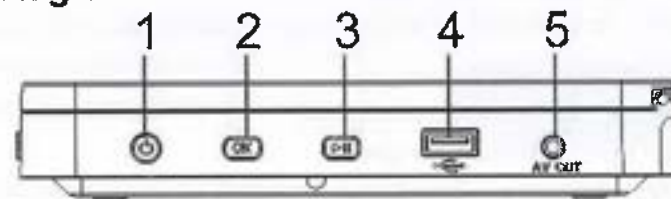

- ① Turn on / Turn off
- ② OK
- ③ Start (resume) / pause play
- ④ USB
- ⑤ AV Out

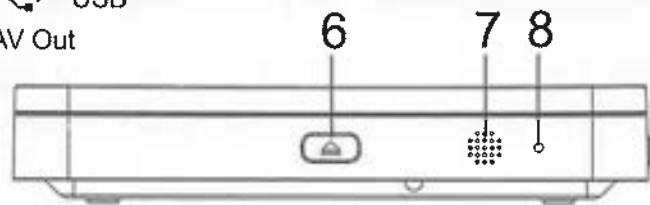

- ⑥ Open the disc compartment
- ⑦ Point the remote control at the IR sensor
- ⑧ Power indicator light

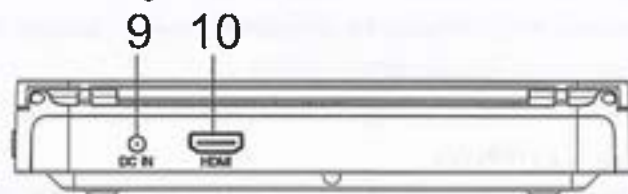


- ⑨ DC IN 12V 1.5A
- ⑩ HDMI OUT

Remote Control

1 Remote Control Definition

-) Power: Turn on/off the player or restore the player to standby mode.
-) MUTE: Press to mute or un-mute the volume
-) PROG: Edit the program and play
-) Mark View: To bookmark at any point during playback
-) Mark Set:
-) Zoom: zoom in or zoom out
-) Slow: Slow down the playback speed
-) TOP MENU: To open the Top menu of BD/DVD video disc

- (9) RETURN: Return to a previous display menu
- (10) DISPLAY: show the current status of the disc information
- (11) SETUP: Access the SETUP menu
- (12) TITLE: To open the Title menu of a disc
POPUP: Shows and hides the popup menu
- (13) REPEAT: The specific repeat mode is different according to the disc type.
- (14) Media Center: Press enter into USB devices
- (15) PREV: Skip to the previous title, chapter, or track
- (16) SUBTITLE: Select a subtitle language on a disc
- (17) AUDIO: Select an audio language
- (18) NEXT: Skip to the next title, chapter, or track
- (19) OSC: To access OnScreen Control Menu
- (20) GOTO: Jump to a user-specified time during playback
- (21)(22)(23)(24)Up, Down, Left, Right: The direction keys can be used to move the highlight in the menu
- OK: Confirms an entry or

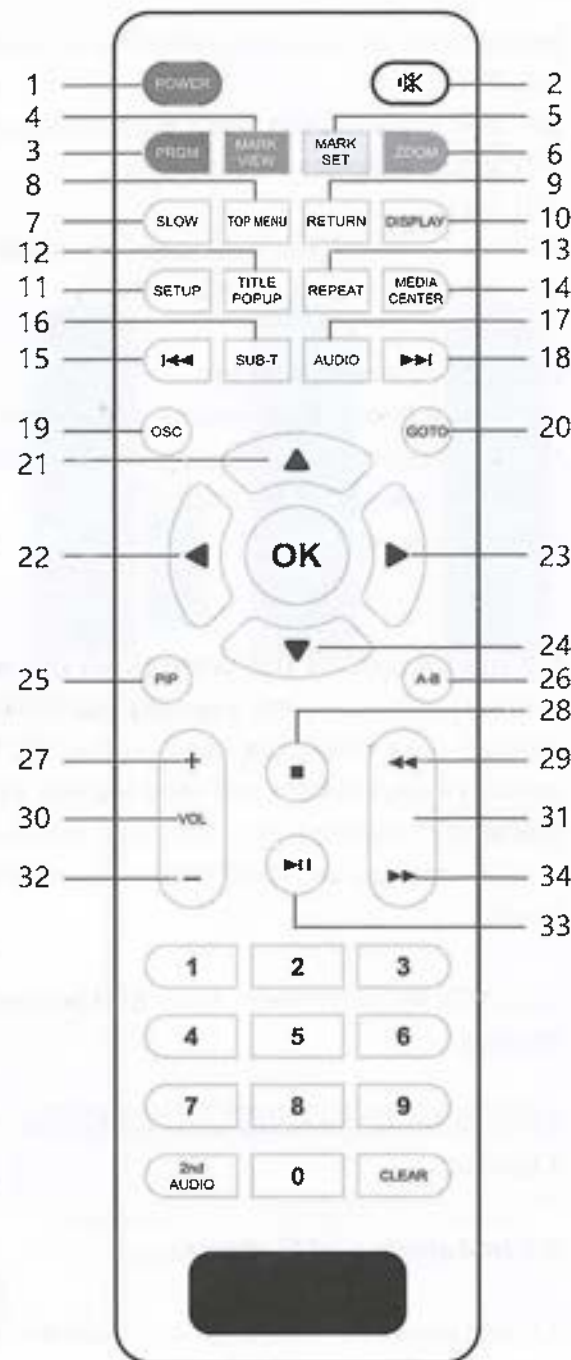

- selection
- 5) PIP
 - 6) A-B: Press A-B can repeat playback of a user-defined section
 - 7) VOL+: Increases volume
 - 8) Pause
 - 9) Fast Forward: Skips backwards, consecutive short presses to go to 5-level speed(X2->X4->X8->X16->X32 ->PLAY)
 - 2) VOL-: Decreases volume.
 - 3) Play & Pause: Start (resume) / pause play
 - 4) Fast Reverse: Skips forward, consecutive short presses to go to 5-level speed(X2->X4->X8->X16->X32 ->PLAY)
 - 5) Number Keys

2 Useful tips for the buttons on the remote control

Enter into "setup" page, you can press "RETURN" button on the remote control to back to the main menu, but the "RETURN" button is non-functional in the main menu interface, you need to press "SETUP" button to back the play interface;

After you press the "OSC" button, you need to press "Return" or "OSC" again to exit;

"GOTO" will be auto-exit, if you don't operate the remote control after 23 seconds

"DISPLAY" button will be auto-exit if you don't operate the remote control after 23 seconds.

3 Installation of Batteries

Press and lift the back cover up to open the battery compartment of the remote control.

2. Insert two AAA size batteries. Make sure that the polarities of the batteries (+) and (-) match those of the battery compartment.
3. Close the battery compartment cover.

NOTE:

Remove the batteries if you don't use the remote control very often.

Do not mix old and new batteries.

Do not mix alkaline, standard

(carbon-zinc) or

rechargeable

(ni-cad, ni-me, etc.)

batteries. Batteries

can contain

corrosive

substances, so they should be disposed of properly.




CAUTION

Due to a risk of explosion. Keep batteries away from heat, direct sunshine, or fire. Never discard batteries in a fire.

7. Connections

7.1 Connect Power adapter

Connect the power adapter (supplied with the player) to the side input plug and to a wall input plug and to a wall outlet.

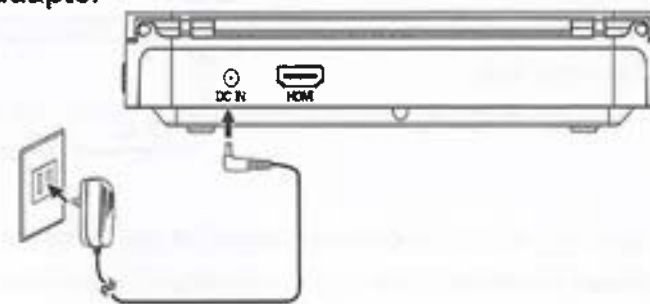


2 Connect USB Device

USB device card to play a multimedia file



USB port: Support 2.0 and 3.0 USB flash drive, not mean compatible with all 3.0 devices, (Max 128G) and USB HDD (Max 8TB).

When you use the USB HDD to play videos, you'd better plug a charger on the USB HDD to power the USB HDD, or your player will not be able to recognize USB HDD.

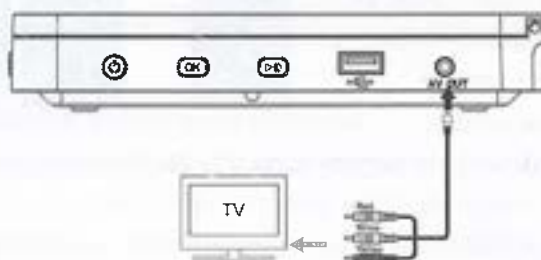

3 Connect TV Via AV Out


Connect the AV cable to AV OUT



4 Connect TV and Projector Via HDMI Cable (included)

Connect an HDMI cable to the HDMI jack located on the rear of the discs player.

Connect an HDMI cable to the HDMI Input jack on your television.

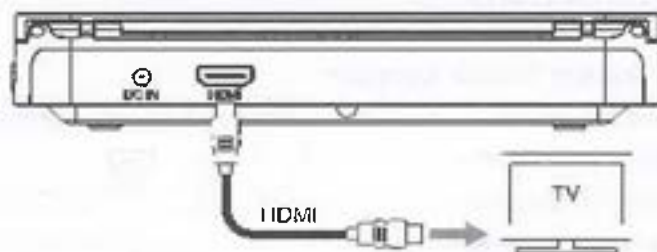

Please noted that you must use the HDMI jack to output the Blu ray discs because the AV jack just supports standard resolution video output.

User Tips

You can optimize the video output by pressing the "Resolution" button repeatedly to select the best resolution the TV can support;

To play the digital video images of a disc or video via an HDMI connection, it is necessary that both this product and the display device (or an AV receiver/ amplifier) support a copyright protection system called HDCP (high-bandwidth digital content protection system);

HDMI connection provides the best image quality.

8. Basic Player Operation

Depending on the discs, some operations may be different or restricted. Do not put any objects other than disc on the disc tray. Doing so may cause the player to malfunction.

Notes:

If a "⊘" mark appears on the screen when a button is pressed, it means the function is not available at the moment on the current disc or at the current station.

Depending on the conditions of the recording equipment or the CD-R/ RW disc itself, some discs cannot be played on this player due to the configuration and characteristics of the disc, or due to the condition of recording and authorized software that was used.

Disc error messages

If there is a problem with the format of the loaded disc, then the disc cannot be played correctly.

The region code of the disc does not match the player's region code.

The parental rating level of the disc is higher than the parental rating level setting

the player. The player will not play the disc.

Ad/No disc: The player is equipped with automatic disc quality detection software. If the player detects a disc that is damaged or has a format problem, it may play the disc at a lower quality or stop playing completely, depending on how serious the damage is.

Note: Discs production quality may vary and some discs may deviate from the industry standard. Some incorrectly formatted discs may still play; however, the playback and operational quality of the disc may be substandard.

1 Before you begin

Plug the power adapter first, the LED indicator light will change to Red.

Press  on the remote control to turn on the Blu-ray disc player, then the indicator light will change to Green.

Turn on the TV and switch to the correct video input (refer to the TV user manual)

The machine will be in standby mode without inserting a disc for a long time, and the indicator light will change to red again.

If you didn't have discs in the player, it will show an error message to remind you to insert a disc.

Select the appropriate video input settings to correspond to the input used when connecting to the discs player. Refer to the "Connections" section of this manual;

If you have connected the player to an audio system (stereo or amplifier) turn on your audio system and select the appropriate audio input settings to correspond to the input used when connecting to the Discs player.

Note:

- 1) As TV and audio systems vary, please refer to your TV or Audio system user's manual.
- 2) **Please use HDMI cable to connect with your TV when playing Blu-ray discs**, because AV jack does not support play Blu ray videos. If you use the AV cable to connect with your TV to play the Blu-ray videos, there will be an error message shows on the screen.

8.2 Open the disc door to play discs

- ◆ Press  button on the player to open the disc compartment . Then the disc door will be opened directly
- ◆ Hold the edge of the disc and insert a disc with the label facing up
- ◆ To close the disc compartment, please press the disc door by hand.
- ◆ To stop playing a disc, press  button on the remote control
- ◆ To turn off the machine to standby modes, press "" again

Usually, the player will start to play a disc automatically once the discs were been put in. You can use the directional buttons and the OK button on the remote control to navigate the disc's menu screen. If the discs do not automatically begin playing, press the PLAY button on the player or remote control.

Note: The auto-load sequence of each Audio discs, CD, VCD disc may vary according to formats or the way the disc was authored.

Some discs will auto-play a series of previews, copyright notices, or advertisements before loading the Menu screen. Certain buttons on the remote control, such as the MENU, TITLE, F.RWD, F.FWD, PREV, NEXT, and GOTO buttons, may be automatically disabled until the auto-load sequence is completed.

8.3 Play Video

Control Video Play

Play a title

Use the remote to control the play back

Button	Action
▶	Start or resume play / Pause play
■	return to start, if you want to play videos again, press
◀▶	Skip to a previous/next title or chapter.
◀▶	Search fast-backward or fast-forward. Press repeatedly to change the search speed.

Note:

For BD disc with Java application, the resume function is not available.

Display Menu

BD-video Disc

POP MENU: Stops the video playing and returns to the disc menu. This feature is

disc-dependent

POPUP: will access the BD-video disc menu without interrupting disc play.

BD-video disc

POP MENU will display the root menu of a disc

DISPLAY will display disc information and guide you through the available functions on the disc

Change Video Play

Button	Action
Audio	Selects an audio language
SUBTITLE	Selects a subtitle language on a disc
REPEAT	Select or turn off repeat mode Repeat options may vary from the disc type
DISPLAY	Display the current status or disc information
OOM	Zoom in/out of the video image
BOOK MARK	Bookmark the selected point during playback

A-B	When a disc is playing, pressing this button once will save a "start point" for repeating playback, Pressing this button again will save an "endpoint" for repeated playback. playback will repeat from the start point to the endpoint. The marked section for repeat play should be in one track/title
PROGRAM	Edit the program and play
GOTO	Jump to a user specified time during playback
OSC	Access options relating to the current activity or selection, and control the video playback

8.4 Play a Blu-ray video disc

Blu-ray video discs have a larger capacity and support features such as high-definition video, multichannel surround sound, Interactive menus, and so on.

1. Insert a BD-video disc.
2. Playback will automatically start, or select a play option in the menu and press OK.
3. During playback, you can press TOP MENU to display additional information, features, or content store on the disc.
4. During playback, you can press POP UP to display the disc menu without interrupting disc play.
5. During playback, press the [OSC] button on the RMC - the ON-SCREEN MENU will be displayed. (As shown in the picture below)





second video 【BD-V】 : Displays the state of the second Video. Use selection key 【▶】 to open the second video selection box, then press 【▲】 / 【▼】 to select the full-screen video and the second video window (picture in picture).

Primary video
Second

second Audio 【BD-V】 :

Displays the state of the second Audio. Use the selection key 【▶】 to open the selection box, then press 【▲】 / 【▼】 to switch on/off the audio output.



5 Play Music

Controlling music playback

Use the remote control to control the playback for the audio files.

Button	Action
▶	Start or resume play / Pause play.
■	Stop Play
◀◀ ▶▶	Skip to a previous or next title or chapter
◀▶	Search fast-backward or fast-forward. Press repeatedly to change the search speed.
1 2 3 4 5 6 7 8 9 0	Select an item to play
REPEAT	Select or turn off repeat mode

8.6 Play a photo slideshow

You can play JPEG on the player as a slideshow.

1. Insert a disc or USB device that contains JPEG files
2. Select a Photo folder, then press OK to open.

- To select a Photo, use the Navigation buttons.
- To enlarge the selected Photo and start the slideshow, press OK.

Note:

- It may require more time to display the disc content on your TV if there is a large number of songs/ photos compiled onto one disc.
- This product can only display digital camera Pictures in the JPEG-EXIF format, typically used by almost all digital cameras. It cannot display Motion JPEG, or Pictures in formats other than JPEG, or sound clips associated with Pictures.
- Folders/files that exceed the supported limit of this product cannot be displayed or played.

Controlling Photo slideshow

1. Begin a Photo slideshow.
2. Use the remote control to control the play as follows:

Button	Action
◀▶	Rotate a photo
▲▼	Flip a photo
■	Stop play

Set slideshow interval and animation

1. During slideshow playback, press OSC. The options menu will be displayed.
2. Navigate the options with the Navigation button.
3. Select an option in the menu, then press OK.
4. Press OK.

Playing music during a Photo slideshow

create a musical slideshow to play both CD music files and JPEG Photo files simultaneously.

Note:

To create a musical slideshow, you must store the CD and JPEG files on the same disc as the photos.

Select your CD music to play and start play-back.

Press Media Center to return to the main menu.

Navigate to enter a photo folder, then press OK to start slideshow play.

Slideshow begins and continues till the end of the photo folder.

Audio continues to play until the end of the disc.

To stop the slideshow play, press ■.

To stop the music play, press ■ again.

Play files from USB Thumb Drive

Before plug the power adapter of the player, insert the USB flash drive to the USB port on the front of the player first.

Then plug the power adapter on the player, and then connect the player with your TV via AV cable or HDMI cable.

Turn on the player and your TV, the main interface will be shown on your TV.

Press "USB" buttons on your remote control.

If you want to return the last menu when playing the files, please press the "Left" button on the remote control, please noted that the "return" button is not functional in this part.

Please noted that the USB can compatible with 2.0 and 3.0 USB flash drive, not mean compatible with all 3.0 devices, and when you use HDD to play the files, you need to power the HDD via the other power adapter, otherwise, it couldn't be read.

and please noted that if you use an HDD to play the files, you need another power source to power the HDD on, otherwise the USB current is not high

enough to recognize the HDD.

Notes

1. The player can support USB 2.0 and 3.0 USB flash drive, if the USB can't be read, please help to change another USB flash drive with lower storage to have a check

2. The Player support video files of H.264/VC1/MPEG-1/MPEG-2/MPEG-4 WMV, and resolution up to 1920*1080.

And you can also press the "Solid Square button" on the remote control to back to the main interface.

10. General Settings

10.1 Basic operation for the menu

1. Press STOP twice during playback
2. Press SETUP, the SETUP MENU display on the screen.
3. Select a main menu by LEFT/RIGHT.
4. Select the menu you want by UP/DOWN buttons and press RIGHT to enter. You can press UP to return to the main menu.
5. Select the option by UP/DOWN and press RIGHT. You can press LEFT to return to the previous menu.
6. Select by UP/DOWN buttons and press OK to confirm. You can press LEFT to return to the previous menu.
7. To return to the main menu from any sub-menu, press RETURN.
8. To exit the menu, press SETUP.

10.2 General Player Settings

SYSTEM

1. Screen Saver: Turns the screen saver on/off. The screen saver will display in 3 mins if there is no operation when the unit is turned on.

Disc Auto Playback: Turns the disc auto playback function on/off.

Disc Auto Upgrade: Turns the Disc Auto Upgrade function on/off.

Load Default: Return the player to its default settings.

Upgrade: select this when you want to upgrade your player software to the latest version.

BUDA: Define memory for BD-J.

Easy setup

Notice : BUDA Setup has two-sub menu of "External" & "On board". If you choose "External", you must connect USB first.

LANGUAGE

OSD: Selects the OSD language.

Menu: Selects

the menu language of the disc.

Audio: Selects the audio language for the program.

Subtitle: Selects the subtitle language for the program.

Note:

You have to select the audio and subtitle language according to the requirements on the disc.

PLAYBACK

Closed Caption: Turn on/off the CC function.

Angle Mark: Turn on/off the Angle mark function.


PIP Mark: Turn on/off the PIP mark function

Secondary Audio Mark: Turn on/off Secondary Audio mark function.

Last Memory: Turn on/off the last memory function

PBC: Turn the PBC function on/off.

Audio Watermark Level 3: Function reserved.

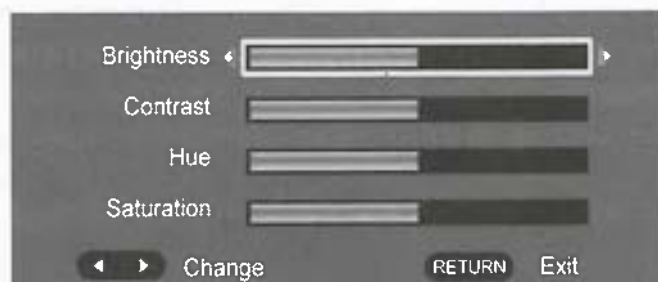

SECURITY

1. Change Password: Changes the password for parental control menu.

2. Parental Control: to set the parental control.

3. Country Code: Select the Country code.

Note:

The original code is 0000, if your original code shows wrong after you typing "0000", please message us.

Default

Use this feature to reset customized defaults to the original settings for the unit (except the password). To default the player, you need to enter into the setup page, load default, then choose back to the factory setting.

10.3 Player Settings

TV

1. TV Screen: Selects the display mode for the TV.

2. Resolution: Selects the resolution for the TV.

3. TV System: Selects the TV system type.

4. Color Space: Selects the color space.

5. HDMI Deep Color: Selects the color for HDMI.

6. HDMI 1080 24Hz: Enable/disable this settings.

7. This player supports Multi (AUTO), NTSC, and PAL systems.

If you select an output type that is not supported by your TV, the screen will flicker with a black and white display.

Press the SETUP button and use the arrow buttons to select the correct TV type from this list.

VIDEO PROCESSING

Video Adjust: Enter the sub menu to adjust the video display.

Sharpness: Select the playback sharpness mode.

Adjust the Brightness, Contrast, Hue, Saturation of the screen to suit.

10.4 Audio Setting

Audio output

HDMI: Selects the HDMI mode.

Down sampling: Selects down sampling.

(Select this when the Amplifier connected to the player is not 96KHz compatible)

Dolby DRC: Dynamic range compression

Speaker Setting: Selects speaker output

Configuration: channels 2.x

Test Tone:

Clean Discs

Wipe the disc with a Micro fiber Cleaning Cloth from the centre to the edge in a straight line movement.

Caution

Never use solvents such as benzene, thinner, cleaners available commercially, anti-static sprays intended for discs to clean the player.

11 Support formats

Playback disc formats

BD, BD-R, BD-RE, DVD-R/RW, DVD+R/RW, DVD-Video, VCD, CD, CD-R/RW
Max 1080P

Blu-Ray Discs Region: Region A/1, Single Region B/C doesn't support;

Non-Blu Ray Discs Region: Region Free

Video formats

264/VC1/MPEG-1/MPEG-2/MPEG-4/WMV

Signal system: PAL / NTSC

- Composite video output: 1 Vp-p (75 ohm)

- HDMI video output: Auto, 480i/576i, 480p/576p, 720p, 1080i, 1080p, 1080p@24Hz.

2.0 Channel analog output.

- 1) Audio Front L&R: 2 Vrms (> 1 kohm)

- 2) Digital output: 0.5-Vp-p (75 ohm)

- 3) HDMI output

Audio formats

Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS, WMA

Photos

JPEG, PNG, GIF

12. Main unit specifications

- Power supply rating: 100-240V~50/60Hz
- Power consumption in standby mode: <0.5W
- Dimensions (w x h x d): 260 x 193 x 43.5 (mm)
- Net Weight: 0.9kg
- Wave length:
 - BD: 405 + 5nm/-5nm
 - DVD: 650 + 13NM/-10NM
 - CD: 790+15NM/-15NM

13. Warranty Exclusions

The warranty will be void if:

1. The product has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product.

The product has been used for purposes other than its intended function.

The product has been used for purposes other than household use.

The damage or malfunction of the product is caused by any of the following conditions:

Incorrect voltage

Accidents (including liquid or moisture damage)

Misuse or abuse of the product

Faulty or improper installation

Electricity supply problems including power surges or lightning

Damage

Infestation by insects

Tampering or modification of the product by persons other than

authorized service personnel

Exposure to abnormally corrosive materials

Insertion of foreign objects into the unit

Use with unapproved accessories

4. Troubleshooting

WARNING: Before requesting after service please check this possible resolution. Risk of electric shock. Never remove the casing of the product. To keep the warranty valid, never try to repair the product yourself.

No reaction to the remote control	Make sure the player is connected to a power outlet; Insert the batteries correctly; Point the remote control at the IR sensor located on the front panel of this product, check that the remote control is no more than 20 feet from the sensor; If the remote still does not function, try putting new batteries into the remote control.
No picture	See TV manual for correct video input selection; Change the video until you see the screen.

No picture on HDMI connection	If this player is connected to an unauthorized display device with an HDMI cable, the audio/video signal may not be displayed; Check if the HDMI cable is faulty. If faulty or damaged, replace the HDMI cable; If this happens when you change the [resolution] setting, press Resolution on the remote control repeatedly until the picture appears.
High-definition video signal not playing on the TV	Ensure that the audio cables are connected to the audio input of the TV; Assign the audio input of the TV to the corresponding video input. See the TV user manual for details.
No sound on HDMI connection	You may not hear any sound from the HDMI output if the connected device is non-HDCP compliant or only DVI compatible.
Disc cannot be played	Ensure that the disc is loaded properly; Ensure that this player supports the disc. See Specifications Ensure that this player supports the region code of the DVD or BD; For DVD+RW, ensure that the disc is finalized; Clean the disc
Data Files cannot be played or read	Ensure that the data file was recorded in the standard UDF, ISO9660 or JOLIET format; Ensure that the JPEG file extension .jpg, JPG, jpeg or JPEG
Not entry sign appears on the TV	The requested operation is not possible
The power light does not come on	Plug the power cord into a wall outlet Try a different outlet
No Picture	Select the appropriate video input format on your TV in order to receive the player's output signals. Fully insert the plugs on the video cable into the

	corresponding jacks.
No Sound	Fully insert the plugs on the audio cable into the corresponding jacks. Turn on the stereo/amplifier system (if applicable). Select the correct output in the setup menu.
Distorted Picture	Remove and clean the disc Some distortion may occur during the FORWARD and REWIND operations. This is normal.
Flickering or unstable brightness	Connect the player directly to your TV NOTE: Disruptions can be caused by copy protection systems on a discs
The player does not operate	Be sure that a disc is loaded Be sure that the disc is compatible (check the disc's format and color signal coding standard) Check that the disc is correctly loaded Clean the disc Be sure that the Discs player settings are correct
No response when buttons are pressed	Switch player, unplug the power cord, and then plug in the power cord and switch it on again.

5. More Q & A

How to open the discs door and turn on the player?

Dear Customer,

I am sorry to hear you can't turn on the player, please try below steps first:

1. Plug the power adapter of the machine, and press the power on/off button on the remote control, then the indicator light will change from red to green.

B. Then press the open/close the disc compartment button in front of the player, waiting for 2 seconds then the disc door will open.

If you meet any disc compartment issue, please message us for a resolution.

Best Regards

Seller Support

2. Why it didn't play my discs?

Before I solve your issues for you, please read below information first, this is very helpful for playing Blu-ray discs.

About DVD Region Specifications

Global region codes identify DVDs and Blu-ray discs that are compatible with the players typically sold in that region.

The following are the different regions and their corresponding numerical equivalent:

Standard DVDs

Region 1: U.S., U.S. Territories, Canada, and Bermuda

Region 2: Japan, Europe, South Africa, and the Middle East, including Egypt

Region 3: Southeast Asia, East Asia, including Hong Kong

Region 4: Australia, New Zealand, Pacific Islands, Central America, South America, and the Caribbean

Region 5: Eastern Europe, Baltic States, Russia, Central and South Asia, Indian subcontinent, Africa, North Korea, and Mongolia

Region 6: China

Blu-ray Discs

Region A/1: North America, Central America, South America, Japan, North Korea,

South Korea, Taiwan, Hong Kong and Southeast Asia

Region B/2: Europe, Greenland, French territories, Middle East, Africa, Australia and New Zealand

Region C/3: India, Nepal, Mainland China, Russia, Central and South Asia

Note: Most of the DVDs and Blu-ray discs sold by Amazon.com are only encoded for Region 1 or Region A. These titles only play in one region unless noted otherwise.

Normally, Blu-ray patent company didn't allow to support all single region B/2 and region C/3 Blu ray discs due to the patent issue.

The root cause is: if the movies were first released in the US, and it didn't start release in the EU if the US can see it in a region B/2(Europe) movies, then, it will be harmful to the publisher of the movie, it seems that the EU movies will be widespread in the EU country before publishing. They can't earn money then. So, they talked with the Blu-ray company to limit this.

Normally, Blu-ray patent company didn't allow to support all single region B/2 and region C/3 Blu ray discs due to the patent issue.

Due to our products are in America, so the Blu-ray company only allows the related products to play the region A/1 Blu-ray discs, and Blu-ray discs in region-free code.

For standard DVD regions:

We support region 1, 2, 3, 4, 5, 6

Can't play Blu-ray discs, please follow the below tips to check:

Make sure you used the HDMI cable connected with your TV, please understand that only HDMI output support Blu ray videos, AV didn't support; Check the TV system is comply with your Blu-ray DVD player or not, usually, the TV system in the US is an NTSC system, if you adjust it into the PAL system, then the videos couldn't be shown on your TV.

If it is the issue of the TV system, then please try below steps to adjust:

- Press the setup key on the remote
- Go to the preferences selection
- Find the TV type and adjust it into PAL/NTSC/AUTO to have a check.

1. Check your Blu-ray discs is a Region Free discs or Region A/1 discs or not, single region B/2 and region C/3 couldn't be able to read.

2. At the same time, please make sure you are using the correct DVD formats, MAX 1080P.

If the above tips didn't solve your issue, please send me your discs format and connection port together with Amazon order ID for a quick fix.

3. Why the USB didn't work

Here are the tips to play the files from USB flash drive

- 1. Before plug the power adapter of the player, insert the USB flash drive to the USB port on the front of the player first;
- 2. Then plug the power adapter on the player, and then connect the player with your TV via AV cable or HDMI cable;
- 3. Turn on the player and your TV, the main interface will be shown on your TV;
- 4. Press "USB" buttons on your remote control,
- 5. After you press "USB", you will see your USB information; then you can press "up and down" buttons to choose related files you want to play;
- 6. If you want to return the last menu when playing the files, please press the "Left" button on the remote control, please noted that the "return" button is not functional in this part.
- 7. Please note that the USB jack support 3.0 and 2.0 USB flash drive, not all the other 3.0 devices, and when you use HDD to play the files, you need to power the HDD via the other power adapter, otherwise, it couldn't be read.

and you can also press the "Solid Square button" on the remote control to back to the main interface.

and please noted that if you use an HDD to play the files, you need another power source to power the HDD on, otherwise the USB current is not high enough to recognize the HDD.

If your issues couldn't be able to solve via above steps, please contact with us for solution.

Kindly noted that the supported discs formats are as below:

D/BD-R/BD-RE/DVD-R/RW/ DVD+R/ DVD-Video / VCD/ CD/ CD/CD-R/RW

If you are playing a discs with above formats and correct regions, but unable to play, please help to confirm below information:

1. Check if you see the brand logo on the screen of the TV when you turn on the machine?

If yes, it turns the player quality is OK.

If not, please let me know if shows black and white background without the logo or not.

If shows black and white background without any sound when insert the discs, then you need to change your TV system or the setting on the player about TV system from NTSC to PAL, AUTO to have a check.

2. At the same time, please press the "resolution" buttons on the remote control to make sure if is not the issue of the resolution;

If above solutions didn't solve your issue, please kindly send me some images which show your discs format information together with your Amazon order ID so that I can check with my engineer. This is very important, please attention.

5. System set up tips

Below steps to do factory reset

- A. Click Setup on your remote control(Make sure there is no disc in the player)
- B. Go to General Settings
- C. Find System
- D. Find "Load Default"
- E. Click "OK"

If you want to change the system setup information, please don't insert discs on the player. Otherwise, you may not be able to change it successfully.

6. What you need to do if your TV shows black and white background

Please kindly operate as below:

1. Press the setup key on the remote
2. Go to the preferences selection
3. Find the TV type and adjust it into PAL/NTSC/AUTO to have a check

7. Tips to use the "RETURN" button on the remote control

The "return" button on the remote control is not functional in some menu, if you want to return the previous page, you may need to press the related button again. Due to the software updated timely, so this may be differently related to the version.

8. No reaction to the remote control

- Make sure the player is connected to a power outlet;
- Insert the batteries correctly;
- Point the remote control at the IR sensor located on the front panel of this product, check that the remote control is no more than 20 feet from the sensor;

If the remote still does not function, try putting new batteries into the remote control.

No picture

See TV manual for correct video input selection; Change the video until you see the screen.

No picture on HDMI connection

If this player is connected to an unauthorized display device with an HDMI cable, the audio/video signal may not be displayed;

Check if the HDMI cable is faulty. If faulty or damaged, replace the HDMI cable; If this happens when you change the [resolution] setting, press Resolution on the remote control repeatedly until the picture appears.

1. High-definition video signal not playing on the TV

- Ensure that the audio cables are connected to the audio input of the TV;
- Assign the audio input of the TV to the corresponding video input. See the TV user manual for details.

2. No sound on HDMI connection

You may not hear any sound from the HDMI output if the connected device is non-HDCP compliant or only DIVI compatible.

3. Data Files cannot be played or read

Ensure that the data file was recorded in the standard UDF, ISO9660 or JOLIET format;

Ensure that the JPEG file extension .jpg, JPG, jpeg or JPEG

4. The power light does not come on

Plug the power cord into a wall outlet

Try a different outlet

15. The power light does not come on

Plug the power cord into a wall outlet

Try a different outlet

16. No Picture

Select the appropriate video input format on your TV in order to receive the player's output signals.

Fully insert the plugs on the video cable into the corresponding jacks.

17. Flickering or unstable brightness

Connect the player directly to your TV

NOTE: Disruptions can be caused by copy protection systems on a discs

18. No response when buttons are pressed

Switch player, unplug the power cord, and then plug in the power cord and switch it on again.

19. No response when buttons are pressed

Switch player, unplug the power cord, and then plug in the power cord and switch it on again.

Notice:

We only sell brand "NEW" condition products on Amazon, after-sale service will be only offered for customer who orders the brand new products. "Used" products are not under our support.

Thank you for purchasing from us!

Howe Library
13 South Street
Hanover, NH 03755